



MAINTENANCE CHECKLIST

Maintenance should be performed periodically

Basement Watchdog Utility Pump (BWU033P/BWU033PAS)

Follow the safety instructions in the utility pump manual before performing any maintenance.

1. Remove all debris from the pump strainer.
2. Remove all debris from the pump switch.
3. Remove all debris from the area where the pump is operating.
4. Remove all debris around the air relief valve.



PARTS & SERVICE INFORMATION

You can receive technical support, parts, or service by calling Glentronics, Inc. at 800-991-0466, Option #3, emailing us at Service@Glentronics.com, or by visiting the Basement Watchdog website at www.basementwatchdog.com. Send your unit to the address (right) if repairs are needed:

Glentronics, Inc.
ATTN: Repairs
645 Heathrow Drive
Lincolnshire, IL 60069-4205



www.BasementWatchdog.com

800-991-0466

Service@Glentronics.com