



MAINTENANCE CHECKLIST

Maintenance should be performed 1–2 times per year

Basement Watchdog BWSS Series Sump Pumps (BWSS100)

1. Remove all debris from the bottom of the pit.
2. Remove all debris floating in the water.
3. Remove all debris from the float switch cage.
4. Fill the pit with water. Make sure pump turns on at the intended level.
5. While the pump is running, make sure pump is evacuating water at a good pace.
6. If your pit, pump and discharge lines have developed a reddish, slimy buildup (iron ochre) or other deposits, use Basement Wash-Dog™, a pit cleaner that will address the buildup and leave your sump system flowing freely.



PARTS & SERVICE INFORMATION

You can receive technical support, parts, or service by calling Glentronics, Inc. at 800-991-0466, Option #3, emailing us at Service@Glentronics.com, or by visiting the Basement Watchdog website at www.basementwatchdog.com. Send your unit to the address (right) if repairs are needed:

Glentronics, Inc.
ATTN: Repairs
645 Heathrow Drive
Lincolnshire, IL 60069-4205



www.BasementWatchdog.com

800-991-0466

Service@Glentronics.com