The remote terminal can be found on the **front** of the Special controller

→

Remote Connection

N.O.

N.C.

Common
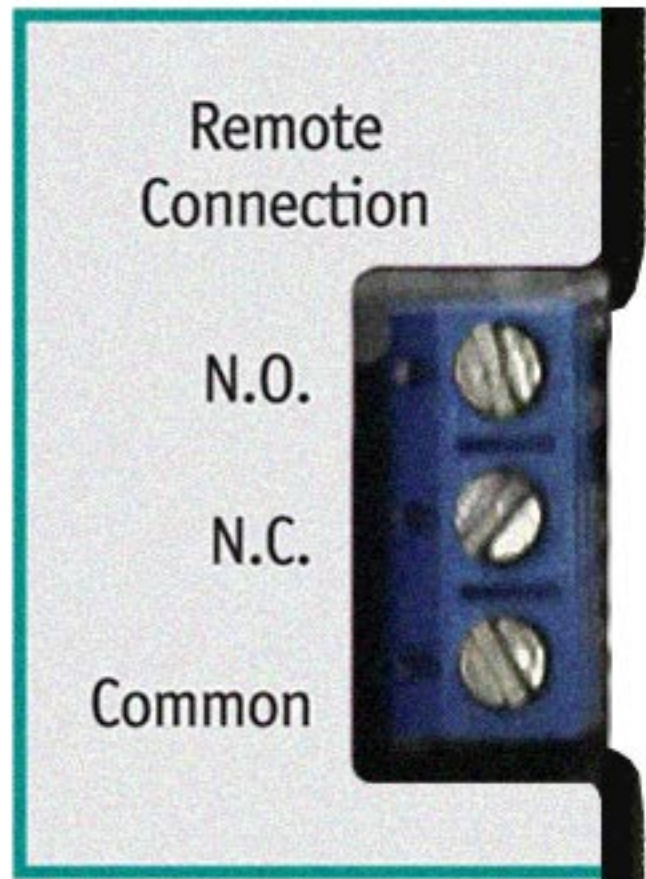
or the **back** of the Big Dog controller

↓

REMOTE   N.O.

TERMINAL   Common

Max. 1 Amp   N.C.